

## Product Ordering Guide

### Instructions

Configure your part number by selecting from the options below. Next, configure your handle functions by clicking on the desired handle type in Box 8 to open the appropriate handle ordering guide.

Once you have your joystick and handle configured part numbers, or need additional assistance to find exactly what you need, please contact your Sure Grip representative.

**CONTACT US**

Example:



**Your Configured Part Number:**

JSC - 2 -  - NN - N - NNNN -  -  - N - DE -  -  -  -

**1. Joystick Model**  
JSC

**2. Axis Options**  
2 - Two Axis

**3. Output Options**  
B - SAE J1939  
C - CANopen

**4. Output Direction**  
NN - Standard

**5. Gate Options**  
N - None

**6. Features**  
NNNN - No Options

**7. Spring Options**  
L - Light Force (1.1-1.7 lbs)  
M - Medium Force (1.8-2.8 lbs)

**8. Handle Options**  
SU - SU Handle  
CU - CU Handle  
LU - LU Handle  
LE - LE Handle  
JE - JE Handle

**9. Wire Length (Inches)**  
N - None (Integrated Connector)

**10. Joystick Connector**  
DE - Deutsch DTM04-6P

**11. Baud Rate (Kbps)**  
250 - 250Kbps  
500 - 500Kbps

**12. Identification**  
Source Address (SAE J1939)  
Range: 20d - 250d, Default 51d  
Node ID (CANopen)  
Range: 1d - 127d, Default 17d

**13. Transmission (mS)**  
Message Rate (SAE J1939)  
Range: 20 to 80, Default 80mS  
PDO Transmission (CANopen)  
20 - 20mS Default

**14. Weather Sealing**  
U - Joystick Unsealed  
S - Joystick Sealed

**Comment Section**

Specifications are subject to change without notice